

# **BIZHUB C35**

## **Meter Read Retrieval**

---

1. Press **{Utility/Counter}**
2. Select **{User Setting}**
3. Select the **{Print Setting}**
4. Select the **{Print Reports}**
5. Press **{Down Arrow (↓)}**
6. Select **{Counter List Print}**
7. Press **{OK}**